



Art.-Nr.
100002251/04.2022

Aluminium-Möbelkomponenten

Sockelsystem


Aluminium Furniture Components

Plinth system

de Montageanleitung

en Assembly instructions


1

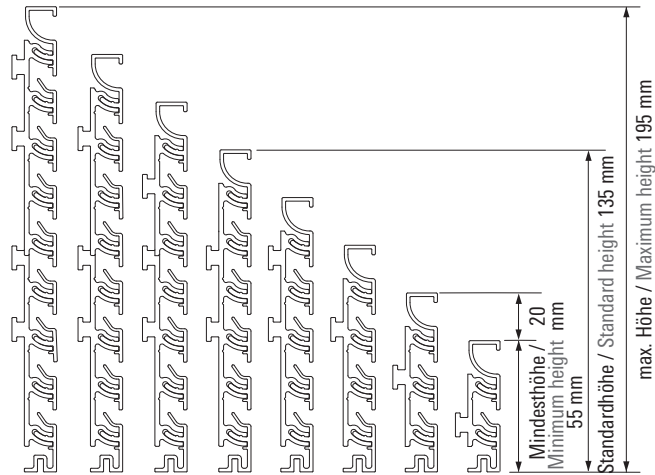


2



KS-Klemmaufnahme alle 20 mm kürzbar
Plastic clamp support, can be trimmed every 20 mm

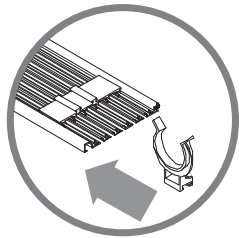


Aufschieben der Montageklammer
für die Sockelfüße
Sliding on the installation clamps
for the base feet

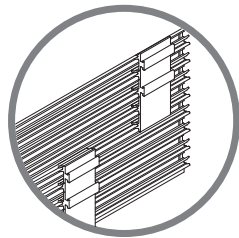

Sockelhöhe durch Verwendung
einer weiteren Klemmaufnahme
einfach erweiterbar (bis 195 mm)
Base unit height can be easily
extended (up to 195 mm) by
using an additional clamp support

3

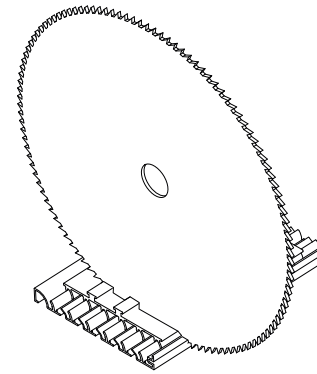

Verletzungsgefahr durch umherfliegende Zuschnittreste
beim Kürzen der vorkonfektionierten Sockelleisten-Lamellen!

Sockelleiste fixieren!


Hierzu eignen sich z.B. die Kunststoffhalter, die im Bereich
der Schnittlinie auf den Bausatz aufgeklipst und mitgeschnitten
werden können.

Risk of injury due to flying off-cuts when trimming the
prefabricated louvre blades of the base unit plinth.


Fixing the base unit plinth

Plastic retaining clips, for example, which can be clipped
onto the kit in the area of the cutting line and cut at the
same time, are suitable for this purpose.

4

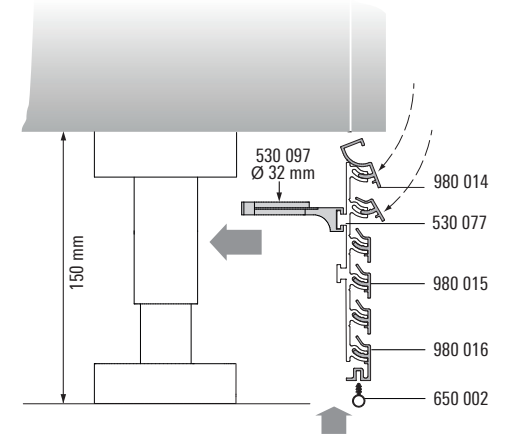


5

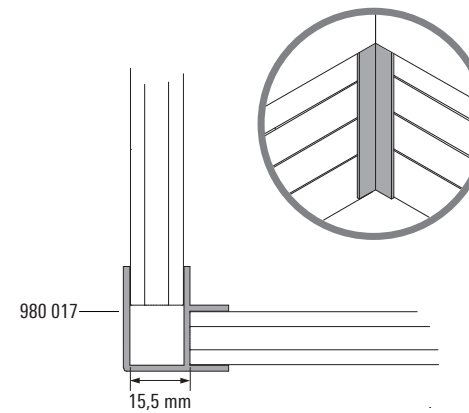

Winkelabschluss entsprechend
der Sockelhöhe ablängen

Cut the angle bracket to length
to suit the base unit height

6

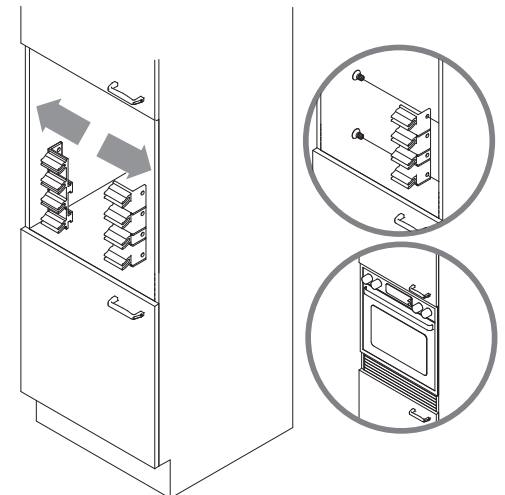

Schüco Interior Systems KG
Werk Borgholzhausen
In der Lake 2
D-33829 Borgholzhausen
Tel. +49 5425 12-0
Fax +49 5425 12-236

interior-systems@schueco.com, www.schueco.com/interior-systems